

# INSTALLATION INSTRUCTION

## Wall Pack Series - TLWMC




### WARNING

**DISCONNECT POWER DURING INSTALLATION AND BEFORE SERVICING.**  
**READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.**

### INSTALLATION:

#### Fixture Preparation

- Remove the front housing by unscrewing two Phillips head screws (A) from the front lens of the fixture.
- Remove the LED module by loosening two screws (B) Be careful not to touch the LEDs.DO NOT DROP!!

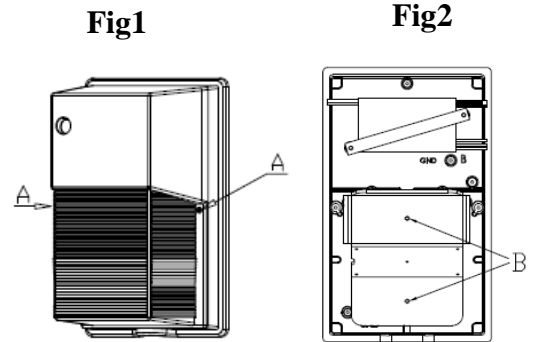


#### 1. MOUNTING WITH TWO BOLTS

Knock out two slugs (C) in rear housing. Mount with two lag screws.

#### 2. MOUNTING ON OUTLET BOX

Knock out appropriate holes (D) around outlet hole in rear housing. Fasten the rear housing to the outlet box using the screws supplied with the outlet box.

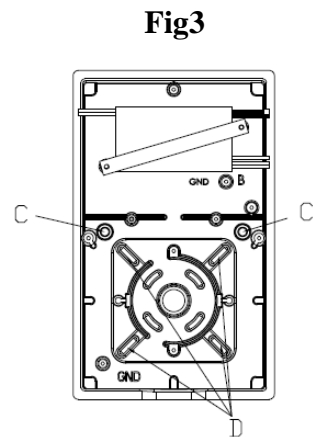

#### Conduit Mounting

- Conduit is located on the bottom of the casting.
- Knock out opening to allow conduit to be attached.
- Fasten the rear casting to the wall using appropriate fasteners for the wall surface.

### Wiring

- POWER MUST BE OFF
- Wiring must be performed by a qualified electrician
- Wire service leads to fixture leads according to local and National Electrical Codes.
- Connect ground wire to green wire, black to black, and white to neutral.

Note: Wiring connections for junction box mounting should be placed in the junction box, not in the fixture.

- Reinstall the front housing.

### WARNING:

- 1.This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- 2.Fixtures are available in 120 to 277 volt input. Please verify before wiring fixture to field wires.

**IMPORTANT:** to weather-proof your outdoor installation, be sure to seal all housing. (Mounting, Conduit, Plugs, , Etc.) with silicone sealant.

### TROUBLE SHOOTER - CHECK LIST

**IF LIGHT DOES NOT WORK:** Check Your Power Source.

Check To Insure Proper Seating Of Lamp.

Check Electrical Connections.

Check If LED Burned Out.