


# Install Guide

This Install Guide is suitable for TLOR series

## 1.Installation Diagram

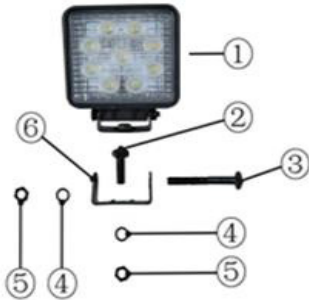

Front:

②+⑥+④+⑤

**Step 1**

③+⑥+④+⑤

**Step 2**

**Step 2.:** Please Assembling the light as the above pictures



**Step 3:** Install the work light on the bracket of the offroad vehicle/ heavy duty machine (car,truck,trailer,excavator etc.)

**Step 4:** Connect Power properly, then power on

## 2. Warning

A). The RED wire connects to the positive (+) terminal on the battery, while BLACK wire connects to the negative(-) terminal on the battery or any other good unpainted metal ground source.

B). Please avoid long time running, otherwise it will shorten the life span of light and the circuit board.

C). Please make sure the light was connected in 10-32V DC , otherwise it may be burned out.